CHRONOGRAPH WITH ALARM

ETA 251.265

ETA SA Manufacture Horlogère Suisse depuis 1793

317 249 - 06.11.2009 / ETA / 02

(USA) Watch hands Minute 60 seconds 30 seconds Pushbutton A hand (position I, II, III)

© DISPLAY

DISPLAY Digital watch indicators

Left indicator

- 1. Crown position I Display of alarm ON/OFF Display of alarm function AL Display of alarm hours Display of alarm hours
 Display of chrono mode CH
 Display of chrono functions:

 - ADD function: display Ad


 - SPLIT function: display SL

 - LAP function: display LP
- Crown position II Time TI Display of hours of digital time according to the change of the time zone
- 3. Krone in Position III Time TI Flashing of hours of digital time Flashing of month M

Right indicator Crown position I Setting crown Display of date d Display AM/PM/24H of alarm (position I, II, III) Display of alarm minutes Display of 1/100 seconds in chrono mode

Crown position II Display AM/PM/24H of time Display of minutes of digital time

. Crown position III Display of AM/PM/24H mode Flashing of minutes of digital time Flashing of day d

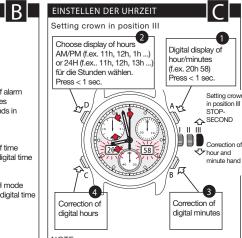


- NOTE:

 Make sure that the analog time always corresponds to the digital time.


 In order to perfectly synchronise analog and digital time, stop the second (by pulling the setting crown to position III) just when the second hand reaches 60".

GΓ


PUSHBUTTONS:

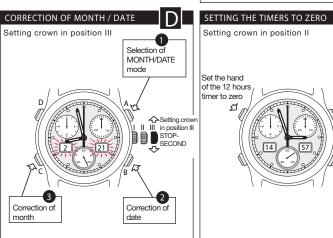

In case of a leap year, February 28 will be followed In case of a leap year, February 28 will be followed by March 1. Set February 29 by hand: - put the setting crown in intermediate position (II) (time zone correction). - turn the hour hand twice anti-clockwise (2 full turns). - put back the setting crown in position (I).

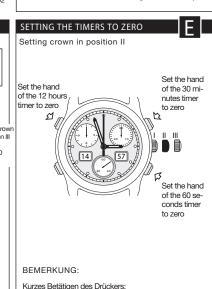


Langes Betätigen (> 1 Sek.) des Drückers beschleunigtes Vorbewegen des Zeigers.

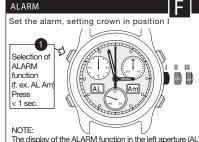

NOTE:


The display of the ALARM function in the left aperture (AL is automatically followed by the display of the alarm hours (left LCD aperture) and of the alarm minutes (right LCD aperture)

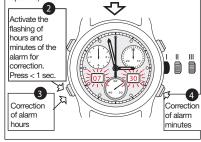

ALARM

alarm, display ON/OFF

NOTE: Once the hours and minutes of the alarm are set, activate or deactivate the alarm as follows:

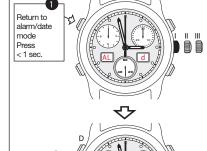

* If the alarm is active (On), a beep will confirm this function.


You can also check the alarm-bell by pressing

pushbutton D for longer than 1 sec. (demo alarm mode).

BEMERKUNG:

When setting the alarm, make sure that the analog time (hands) corresponds to the digital time (right / left apartures).
If it does not, please see paragraph


"Setting the time"

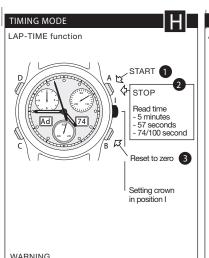



WARNING
Before taking the time, put back the chronograph hands to their original position.


If necessary, see paragraph "Setting the timers to zero'


1 to 3 order of functions

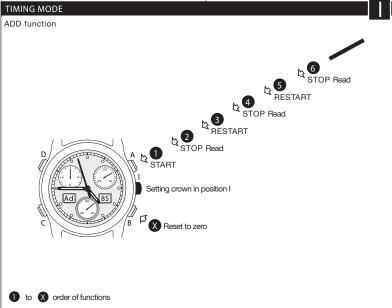


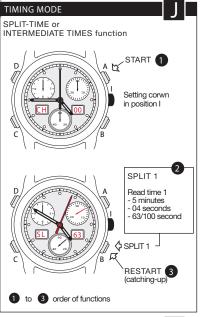


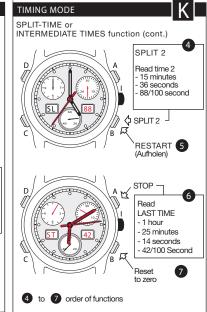

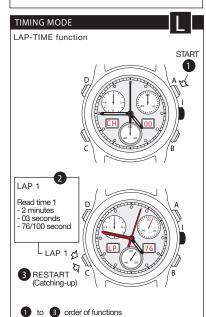

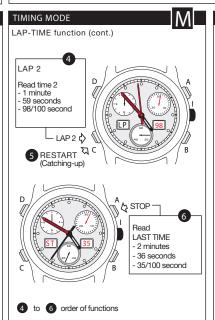


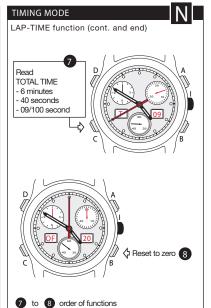

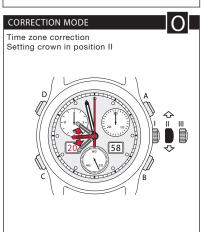

When correcting the time zone, the hours of digital time (left indicator) will be modified as the hands are

You can also adjust the digital time by hand.

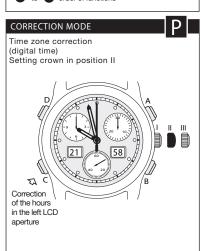

Quick pressure on pushbutton slowly put forward the hours of digital time.

Long pressure (> 1 sec.) on pushbutton: quickly put forward the hours of digital time